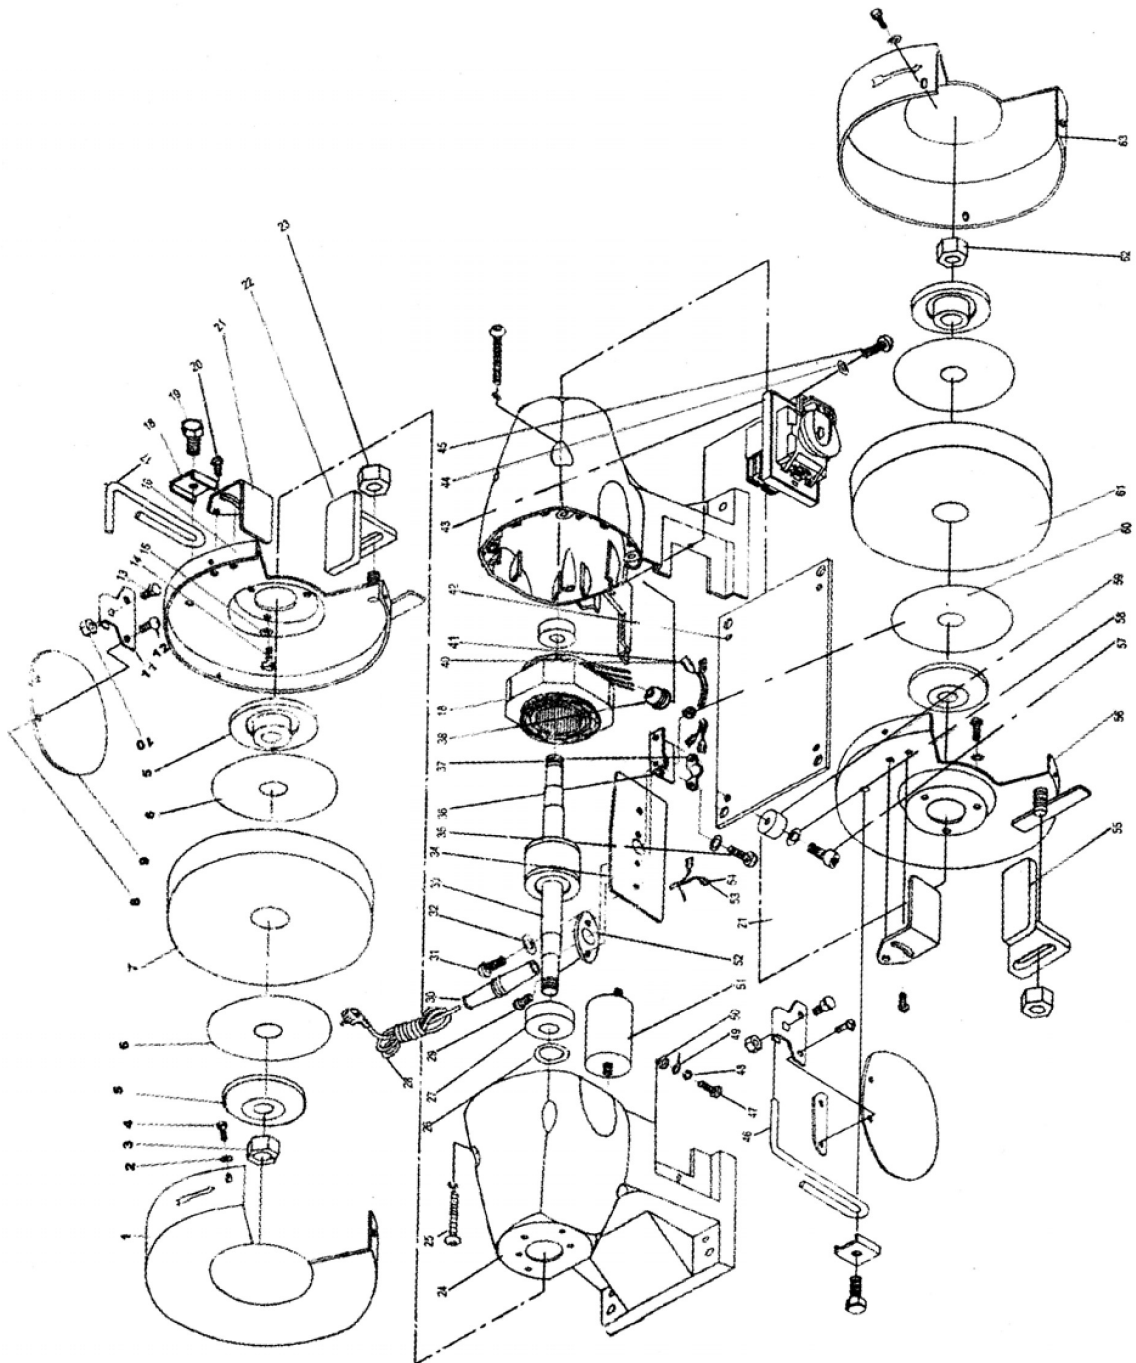

Bedienungsanleitung

Doppelschleifer



MD-3220 HD
MD-3225 HD

Exploded view



Spare parts list

	Name	Type	
1	Left protective cover		
2	Snap ring		
3	Left shaft nut		
4	Recessed head screw		
5	Securing disc / Counter-disc		
6	Ring		
7	Grinding wheel		
8	Mounting for transparent spark-guard, left side		
9	Spark-guard		
10	Nut		
11	Mechanism plate		
12	Locking screw		
13	Fastening screw		
14	Locking screw		
15	Snap ring		
16	Inner cover for grinding wheel, left side		
17	Glass guard support, left side		
18	Mechanism plate		
19	Hexagon bolt		
20	Screw		
21	Adjustable protective cover		
22	Support for workpieces, left side		
23	Fastening nut		
24	Machine frame		
25	Screw		
26	Snap ring		
27	Shaft bearing		

	Name	Type	
40	Cable lug		
41	Rubber cover for cable lug		
42	Mounting plate		
43	Power I / O switch with EMERGENCY function, 240V		
	Power I / O switch with EMERGENCY function, 415V		
44	Washer		
45	Screw		
46	Mounting for transparent spark-guard, right side		
47	Locking screw		
48	Snap ring		
49	Earthing point		
50	Star ring		
51	Capacitor		
52	Clamping		
53	Cable lug		
54	Rubber cover		
55	Support for workpieces, right side		
56	Inner cover for grinding wheel, right side		
57	Screw		
58	Washer		
59	Bottom cartridge		
60	Paper ring		
61	Grinding wheel		
62	Right shaft nut		
63	Right protective cover		

28	Power cord with plug		
29	Screw		
30	Mains lead cleat		
31	Locking screw		
32	Washer		
33	Motor shaft		
34	Machine frame, right side		
35	Screw		
36	Cable support		
37	Cable clamp		
38	Protective covering of cable		
39	Stator		